


Subgrade Stabilization

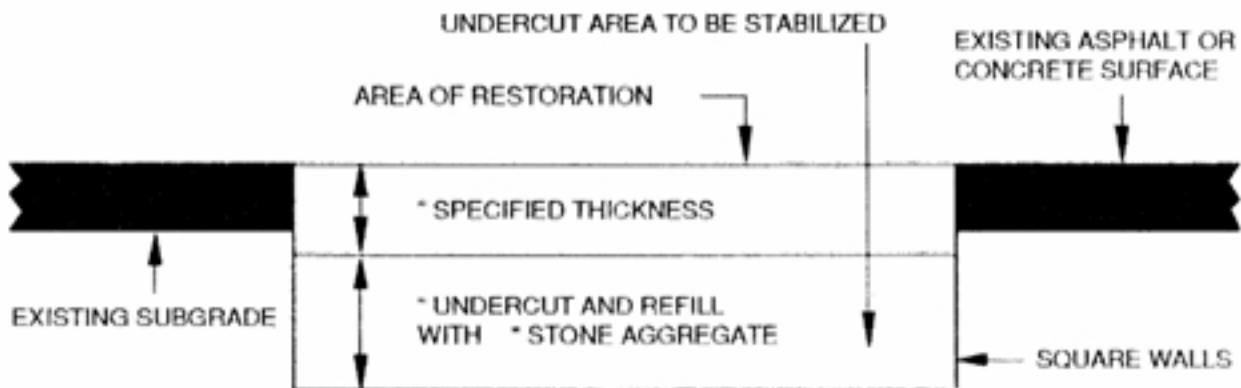

1. Lay out and mark all areas of undercut repair.
2. Excavate areas to be undercut to a minimum depth of 6". Dispose of all debris offsite.
3. Square surface and wall of undercut to produce vertical edges.
4. Refill undercut area with 6" of crushed stone aggregate.
5. Roll crushed stone surface to achieve a true and firm finish.
6. Install specified finish.

