
www.MYpavementGUY.com

Speed Humps

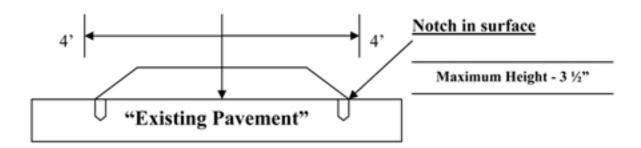

- 1. Lay out and mark area for placement of speed humps.
- 2. Clean area of all dirt and debris.
- 3. Notch existing asphalt surface to alleviate speed hump displacement.
- 4. Tack coat area of installation using emulsified asphalt.
- Install hot mix surface asphalt to a maximum height of 3-1/2" at the apex and a width of 12'.
- 6. Apply heavy duty traffic paint (Option).

Phone: 443-463-1536

Fax: 410-547-1799