


## Full-Depth Finish Concrete Restoration

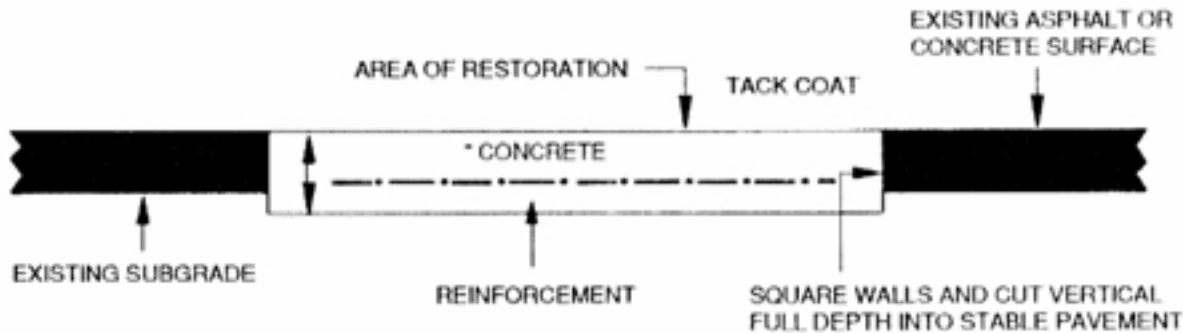

1. Lay out and mark all areas of repair.
2. Excavate areas to be repaired to a depth of 8". Dispose of all debris offsite.
3. Square surface of repair and cut walls of repair to produce vertical edges.
4. Roll existing subgrade materials to achieve maximum density.
5. Install 8" depth 3,500 PSI air entrained and reinforced concrete and finish level with top of adjacent paving. Light-broom finish concrete surface to ensure traction.
6. Apply curing compound and/or provide protection against elements as necessary to promote curing of new installation.

