


## Transitional Milling

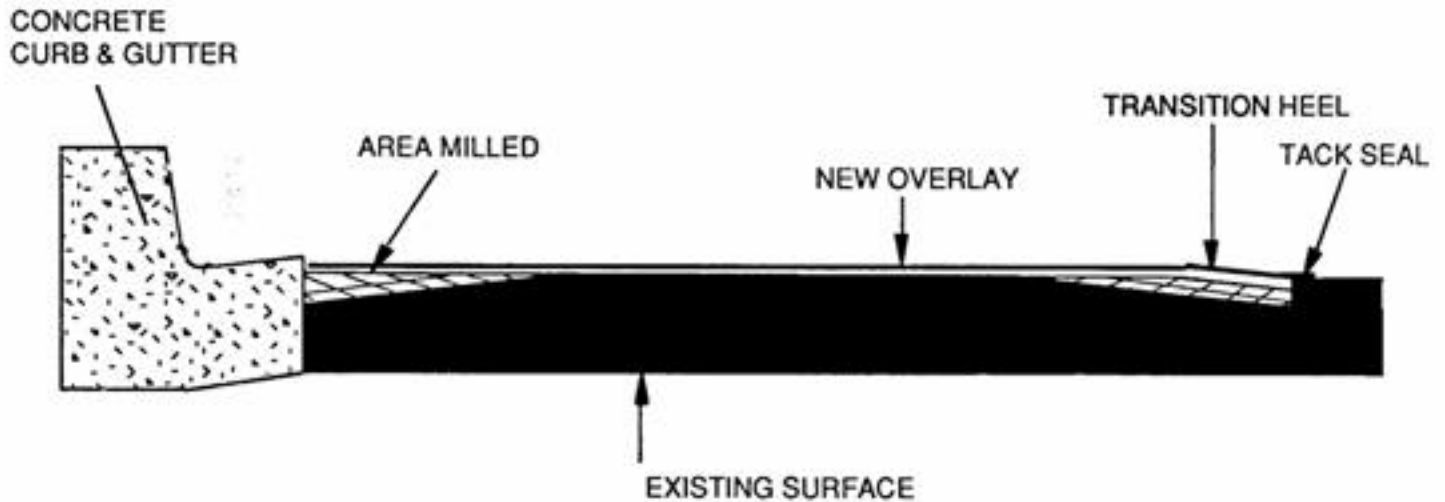

1. Lay out and mark transition areas to be milled parallel to existing surfaces to remain.
2. Mill existing asphalt to a depth of 1-1/2", utilizing machinery designed specifically for this operation.
3. Clean the entire area of repair and dispose of all debris offsite.
4. Install specified finish material.