


Speed Humps

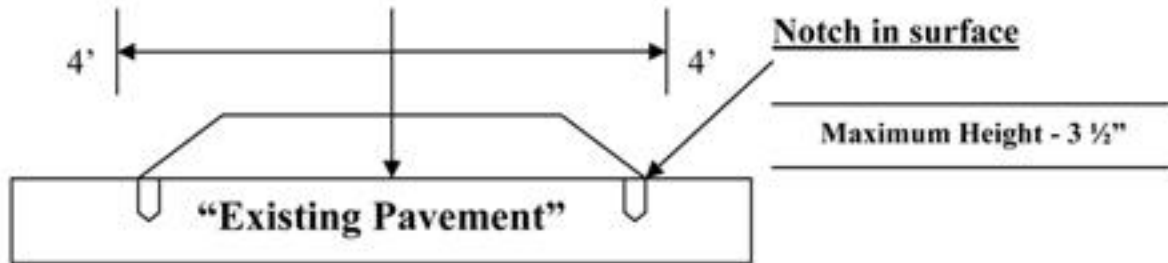

1. Lay out and mark area for placement of speed humps.
2. Clean area of all dirt and debris.
3. Notch existing asphalt surface to alleviate speed hump displacement.
4. Tack coat area of installation using emulsified asphalt.
5. Install hot mix surface asphalt to a maximum height of 3-1/2" at the apex and a width of 12'.
6. Apply heavy duty traffic paint (Option).